

PXL 2000



Fisher-Price®

IF USING WITH AN AC ADAPTOR

CAUTION - ELECTRIC PRODUCT:

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK WHEN USED WITH AN AC ADAPTOR.

Only use AC adaptor with 120 volt 60 HZ AC household current. AC adaptor output must be 12 volt DC 800 mA with negative on center connector. Use only UL/CSA approved adaptor. Do not use PXL2000 adaptor with other products.

Occasionally check PXL2000 to see if rough use has damaged the unit. If damage to the unit is found, it should not be used until it is repaired.

TV - (Deluxe Model 3305 only).

AC adaptor - input 120 VAC 60 HZ - output 12 VDC .8A

A GUIDE TO GOOD PIXELVISION PICTURES

Pixelvision pictures are made up of many tiny dots. It is a unique system and is different from a standard T.V. picture. Best quality is achieved if the guide below is followed and your movie is viewed on a small screen T.V.

Indoors

1. Film with the light source **behind you**.
2. Avoid low light situations. Turn on lights or open drapes to get light into room. Rotate filter to **LO** position.
3. Avoid aiming camera at window areas. This can cause a "wash-out" of light.
4. Move camera **slowly** to avoid blurring of picture.

Outdoors

1. Film with the light source **behind you**.
2. In bright light, rotate filter into **HI** position (any bright, sunny situation).
3. Get as close as possible to your subject. Objects far away will lose detail.
4. Move camera **slowly** to avoid blurring of picture.

NOTE: Make sure **cassette door is closed completely** before shooting. It will "click" shut.

Important Safeguards

Warning/Safety Instructions

Some of the following information may not apply to your particular product. However, as with any AC operated product, precautions should be observed during handling and use.

- Before using the product, please follow and adhere to all warnings, safety and operating instructions located on the product and in the user book.
- If you hear the beeper, press STOP or release REWIND.
- Do not expose product to water or moisture - example: near bathtub, laundry sink, wet basement, swimming pools, etc.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not expose product to extreme temperatures such as found near a hot radiator or stove, or in a car parked in the summer sun.
- Connect AC adaptor only to AC power source as marked on the product. Do not use with extension cord.
- Route AC adaptor & cord to prevent it from being pinched, or walked on or melted by a hot stove or radiator.
- To clean cabinet, unplug AC adaptor, then use soft cloth dampened only with water.
- Do not expose product to lighted candles, cigarettes, cigars, etc.
- Unplug AC adaptor from outlet when product is left unused for a long period of time.
- Care should be taken so that objects do not fall and liquids do not spill into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- Damage Requiring Service. This product should be serviced by qualified service personnel when:
 - A. The AC adaptor or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the product; or
 - C. The product has been exposed to rain; or
 - D. The product does not appear to operate normally or exhibits a marked change in performance; or
 - E. The product has been dropped, or the cabinet damaged.
- If your product is equipped with antenna terminals, and if an outdoor antenna is connected, be sure the system is grounded so as to provide some protection against voltage surge and build-up static charges. An outdoor antenna should be located away from power lines.

PXL2000

At-A-Glance Operating Instructions

Recording:

1. Install batteries (included). See FIG. 2 and 3.
2. Open door, insert cassette and close securely so that it locks.
3. REMOTE RECORD TRIGGER (●) off (FIG. 1)
4. Press RECORD (●) button (FIG. 1)
5. Set INDOOR/OUTDOOR filter ring on lens to LO or HI.
6. Look through viewfinder and frame subject. RED LIGHT WARNING INDICATOR SHOULD NOT BE LIT. (See **System Test: Live Video**, pg. 13, Item 2).
7. Press REMOTE RECORD TRIGGER (●). You are now recording video and sound. If you hear the beeper, stop recording.

Playback:

8. Connect camcorder to TV via included cable and video switch box. Set video switch to CAMCORDER position. See FIG. 5A, 5B and 5C for Model 3305 or FIG. 5D for Model 3300.
9. Set camcorder channel select switch to Channel 3 or 4. See FIG. 1 and FIG. 7 for location and setting positions.
10. Turn on TV and set to Channel 3 or 4 (same as camcorder setting).
11. REWIND cassette (◀) by holding down rewind button. See **Operating Instructions**, pg. 14, Item 3. [If you hear the beeper, stop rewinding.]
12. Press the PLAY (▶) button (FIG. 1) and watch the fun!
13. If you hear the beeper, press STOP.

Table Of Contents

	Page
INTRODUCTION	3
UNPACKING AND PREPARATION FOR USE	4
DIAGRAM OF CONTROLS AND FEATURES	5
BATTERY INSTALLATION	6
SYSTEM TEST: LIVE VIDEO FOR MODEL #3305	8
SYSTEM TEST: LIVE VIDEO FOR MODEL #3300	11
OPERATING INSTRUCTIONS MODEL #3300 & #3305	
■ Live Video	12
■ Recording	14
■ Playback	14
■ Notes About Cassette Tapes	15
■ Using The PXL2000 Camcorder With Your VCR	16
TROUBLESHOOTING	18
CARE AND STORAGE	19
TIPS FOR BETTER VIDEO	20
WARRANTY/CUSTOMER SERVICE INFORMATION	22

Introduction

Your PXL2000 Camcorder is the latest in lightweight, portable video technology. Some product features include:

- Uses high bias chromium dioxide C-90 tape. For best results use PXL2000 cassette. One blank PXL2000 cassette is included with your camcorder.
- Records approximately 10 minutes of video and audio (5 minutes per side on a C-90 audio tape).
- Fixed focus lens requires no adjustment. A simple light selector dial can be set for indoor or outdoor settings. Once this dial has been set, light adjustment is automatic. An LED warning light indicates when the light setting should be changed.

The PXL2000 Camcorder produces a black and white image we call "PIXELVISION." The term "pixel" identifies each individual dot of picture information. With PIXELVISION, the pixels are larger than in conventional TV images and therefore more visible. On larger TV screens, the lower resolution of the PXL2000 Camcorder picture will be more noticeable. For best results, we recommend using black and white or color screens 13" or smaller. The PXL2000 Deluxe Camcorder System includes a 4.5" black and white portable TV that also serves as a Pixelvision viewer.

Unpacking And Preparation For Use

To be sure you have all the required accessories for your new PXL2000 Camcorder, check the components according to your specific model:

Model #3300 PXL2000 Camcorder



PXL2000 Camcorder
Mini bipod stand
Video switch box
Video cable
One PXL2000 audio cassette tape
Instruction book
6 "AA" Duracell® batteries

Model #3305 PXL2000 Camcorder Deluxe System



PXL2000 Camcorder
Mini bipod stand
Video switch box (with antenna adaptor for TV)
Video cable
One PXL2000 audio cassette tape
4.5" diagonal black and white TV (with AC adaptor)
Instruction book
6 "AA" Duracell® batteries

Please save all packing materials, including the box, in case you will need to send the unit in for servicing.

NOTE: In the unlikely event that your PXL2000 Camcorder has damaged or missing parts, please identify the correct component name on the diagram below and contact the PXL2000 Consumer Service Center: 1-800-262-PXL2.

Diagram Of Controls And Features

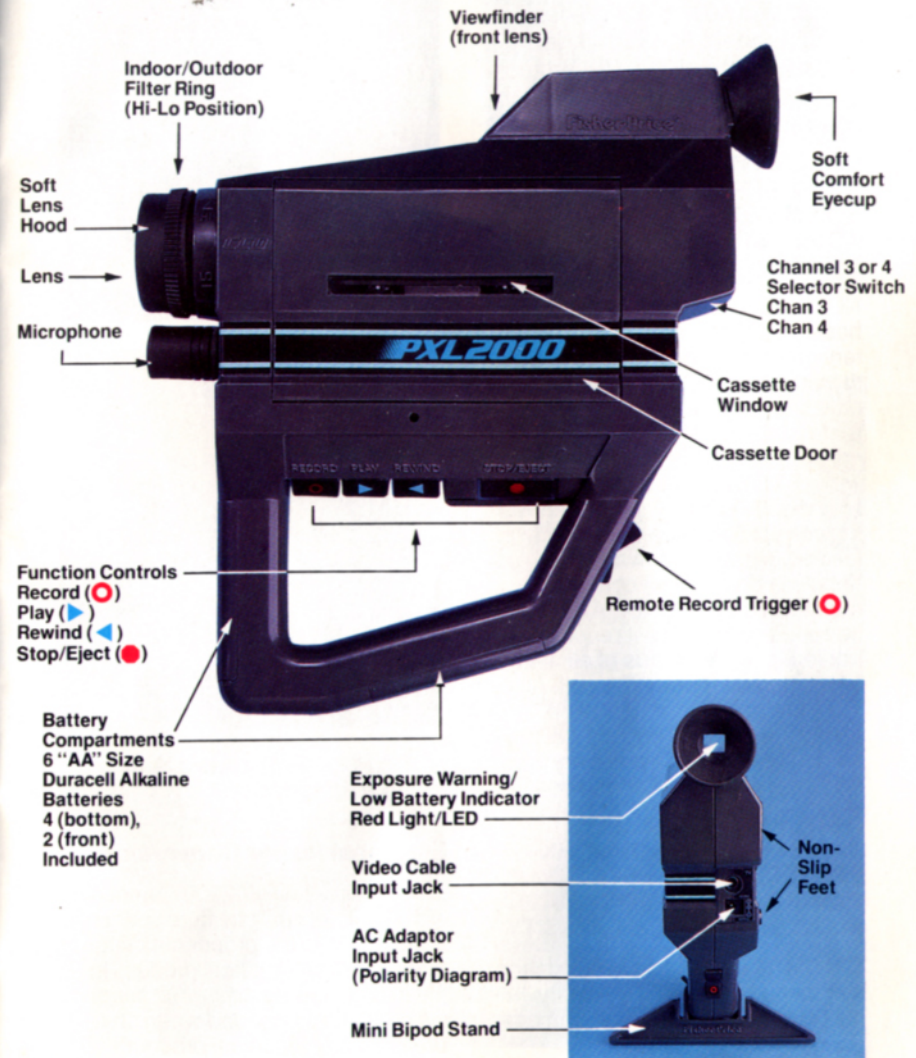


FIG. 1

Battery Installation

To open the battery doors pull back tab with index finger or thumb and pull on door sides with thumb and middle finger as shown. Install the "AA" size Duracell batteries (included) according to the illustration.

IMPORTANT: INSTALL BATTERIES OBSERVING CORRECT POLARITY (+/-) AS ILLUSTRATED INSIDE BATTERY COMPARTMENTS.

NOTE: It is important that the correct battery polarity is observed. The battery contacts have been designed to insure correct insertion; however, care should be taken to insure correct installation. If the batteries are inserted incorrectly, the camcorder will not work and damage to the unit may result. As the illustration shows, the correct polarity (+/-) is clearly labeled on the inside wall of the handle in both battery compartments. Fresh Duracell® "AA" size batteries will give best results; however, other brands of alkaline batteries will operate the unit. Also, to insure consistent operation, always replace *all* batteries at the same time. When low battery light flashes, replace batteries soon.

NOTE: RECHARGEABLE BATTERIES WILL NOT WORK PROPERLY WITH THE CAMCORDER DUE TO THEIR REDUCED STORAGE CAPACITY.

CAUTION: Remove batteries during long periods of non-use. Battery leakage and corrosion can damage the unit.




NOTE: Polarity of batteries is shown in handle graphics.

Electrical Power Conversion:

Before using the PXL2000 Camcorder with an AC adaptor, be sure your child is instructed in the proper handling and care of an electrical product. In the interest of safe play, *adult supervision is recommended when children use any electrical product.*

Attaching The Mini Bipod Stand:

This one-piece stand allows you to have hands-free recording and will also allow you to hold the camcorder steady on a flat surface. You can now star in your own videos! Simply clip the stand onto the lower handle section and position near the back of the bottom battery door (See FIG. 4A and 4B)

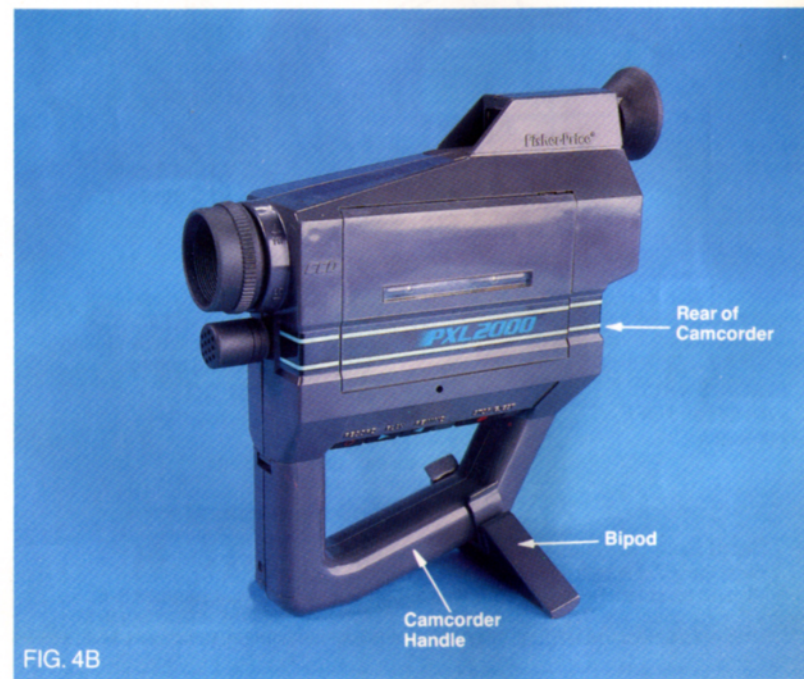


System Test: Live Video For Model #3305

This simple test will allow you to get a live video picture on your TV and will set you up for the RECORD and PLAYBACK functions explained in the next sections on **Operating Instructions**. Refer to the diagrams in FIG. 5A, 5B and 5C for system connections.

Location of Controls


FIG. 5A

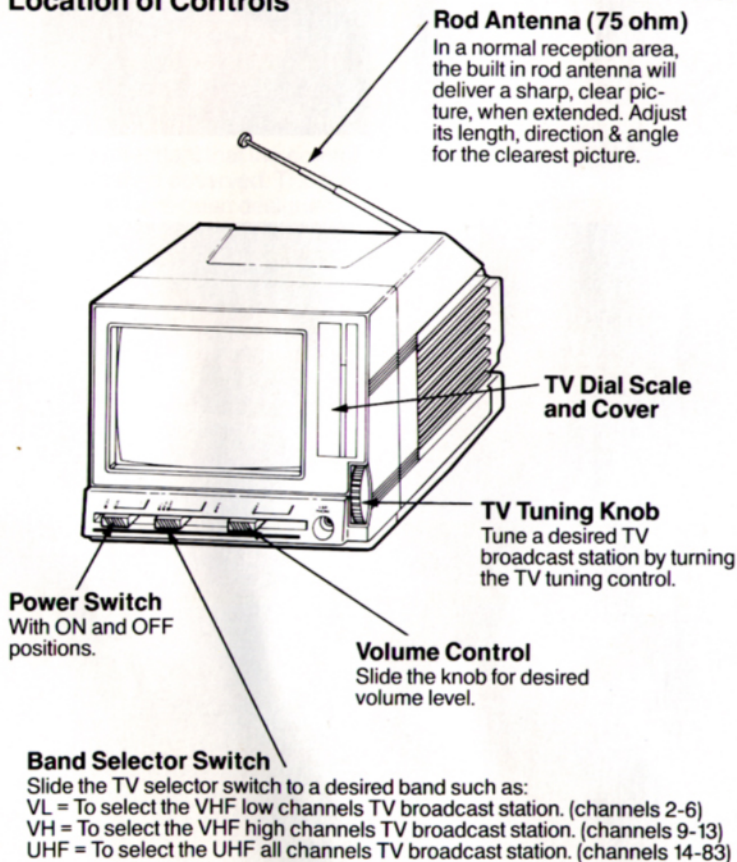

NOTE: DO NOT USE PXL2000 IN LIVE VIDEO MODE FOR EXTENDED PERIODS OF TIME AS IT MAY DAMAGE THE INTERNAL MECHANICAL COMPONENTS. BE SURE TO PUSH THE STOP/EJECT BUTTON WHEN FINISHED.

Location of Controls


FIG. 5B

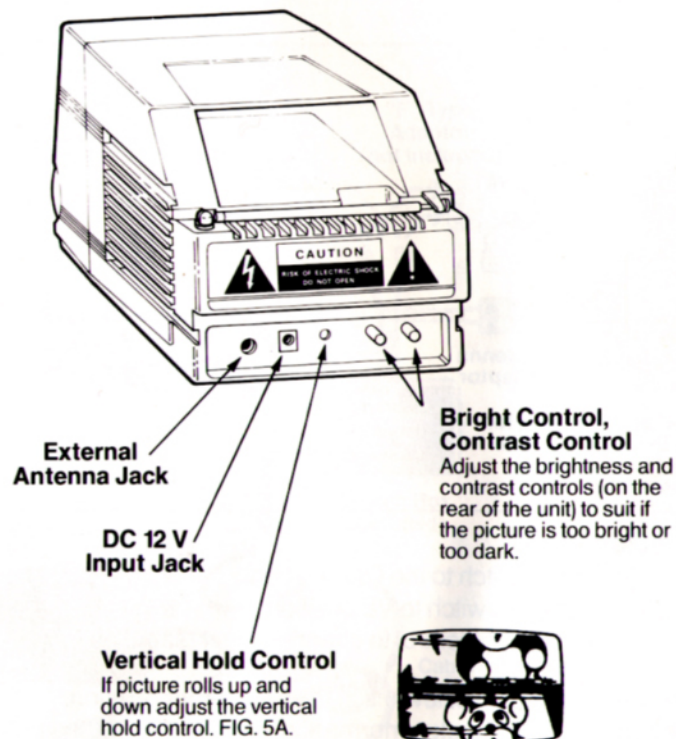


Power Connection

Plug the AC adaptor into the DC input jack on the rear of the TV set and into a 120V/60Hz electrical outlet.

FIG. 5C

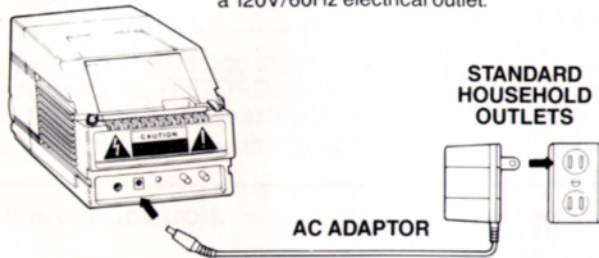

TV Connection

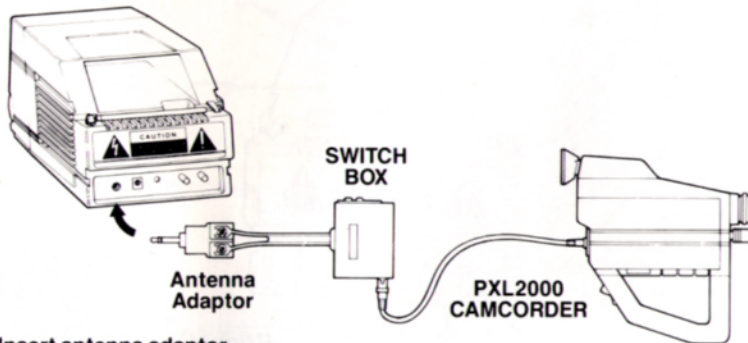

Insert antenna adaptor into External Antenna Jack then Connect to Switch Box

TV Instructions

1. Turn TV power switch to the ON position.
2. Set band selector switch to VL position.
3. Tune TV with tuning control to channel 3 or 4 (same as PXL camcorder).
4. Be sure the switch box lever is in the camcorder position.
5. For best video playback performance, rest the PXL2000 camcorder on its four rubber feet as far away as possible from the TV. Electrical appliances may cause record and playback interference.

Questions or problems? Call 1-800-262-PXL2 for assistance.

System Test: Live Video For Model #3300

This simple test will allow you to get a live video picture on your TV and will set you up for the RECORD and PLAYBACK functions explained in the next sections on **Operating Instructions**. Refer to the diagrams in FIG. 5D and FIG. 6 for system connections.

NOTE: DO NOT USE PXL2000 IN LIVE VIDEO MODE FOR EXTENDED PERIODS OF TIME AS IT MAY DAMAGE THE INTERNAL MECHANICAL COMPONENTS. BE SURE TO PUSH THE STOP/EJECT BUTTON WHEN FINISHED.

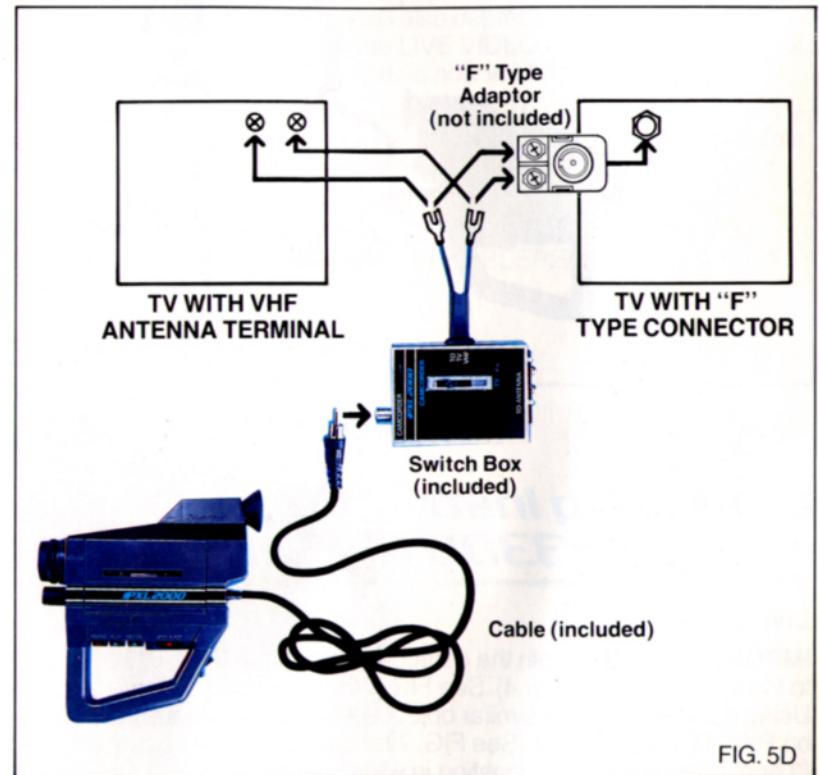


FIG. 5D

VCR HOOK-UP

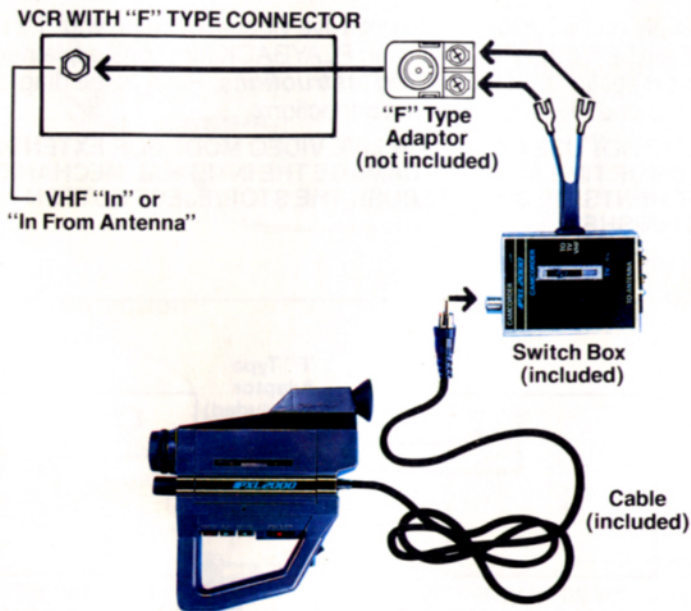


FIG. 6

Operating Instructions- Models #3300 & #3305

Live Video

IMPORTANT NOTE: Both the camcorder and your TV must be set to the same channel (3 or 4). See FIG. 7 for channel select switch. Using a ballpoint pen or similar object set the channel selector switch on PXL2000 Camcorder (See FIG. 7 for location) to the vacant channel (3 or 4) not used for broadcasting in your viewing area.

1. Check the REMOTE RECORD TRIGGER (●) to be sure it is in the Off position. (The RECORD symbol (●) on the trigger should be sticking out.)
2. Check to see that the indoor/outdoor filter is in the correct position for your lighting conditions. (LO or HI) (see FIG. 1). If you are using normal indoor lighting, the LO position should be used. The HI setting is only required for bright light conditions such as bright sunlight. Low light indicator may come on periodically in good light conditions. Do not be alarmed.
3. Press the STOP/EJECT (●) button, open the cassette door, and insert the PXL2000 Camcorder tape supplied. Close cassette door securely so that it locks.
4. Now firmly press the RECORD (●) button in the handle area until it locks. (The PLAY (▶) button will also depress with it.) A cassette must be in the camcorder to operate LIVE VIDEO even though you're not going to record. The camcorder is now in LIVE VIDEO mode.

NOTE: If the Camcorder is left in the live video mode more than 15 minutes, the tape will automatically run to the end and the beeper will sound. This prevents damage to internal mechanical components.

Do not leave the Camcorder unattended in the RECORD mode. ALWAYS PRESS THE STOP/EJECT BUTTON WHEN FINISHED RECORDING OR YOU MAY HEAR THE BEEPER.

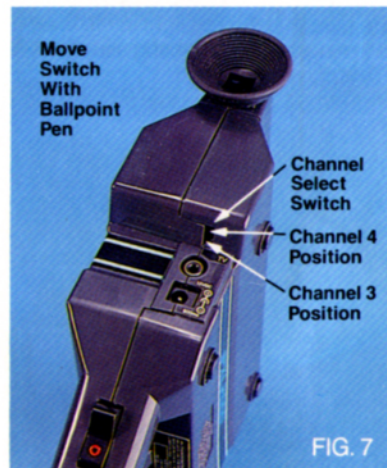


FIG. 7

Recording:

1. To open the cassette door, press the STOP/EJECT (●) button located inside the handle area. Lift the door and insert the PXL2000 Camcorder cassette into the door guides with the open tape area of the cassette facing the buttons.
2. Close the door until it locks securely.
3. Press and hold the REWIND (◀) button to be sure the tape is at the beginning. (CAUTION! Do not hold the REWIND (◀) button down for long periods of time when the tape is stopped at the end of the reel or battery life will be severely reduced.)
4. Be sure the REMOTE RECORD TRIGGER (○) is in the OFF position. (The RECORD symbol (○) should be sticking out.)
5. Now firmly press the RECORD (○) button in the handle area until it locks. (The PLAY (▶) button will also depress with it.) Note: Be sure a cassette is in the unit. The RECORD (○) button cannot be pressed without a cassette in place.
6. Your PXL2000 Camcorder is now ready to record. Simply look through the viewfinder and depress the REMOTE RECORD TRIGGER (○) at the back of the handle. (The motor can be heard to indicate the tape is running.)
7. If you hear the beeper, stop recording.

NOTE: In PXL2000 Camcorder, the cassette tapes run much faster than in conventional audio players in both PLAY and RECORD modes. This is normal for operation of the PXL2000 Camcorder. Be sure that the red light in the viewfinder is not lit or flashing. If it is lit, this is a warning that your lighting situation may be too light or too dark. (See **System Test: Live Video**, pg. 13, Item 2 or **Tips for Better Video**, pg. 20.) If it is flashing, the batteries are low and should all be replaced with fresh alkaline batteries.

Playback:

1. To play back what you have recorded, you must connect the PXL2000 Camcorder to your TV. Lay the camcorder with the cassette door facing up on a flat surface such as a table or counter top. It should be kept as far away from your TV as the video cable will allow, and not on top of the TV, or too close to its sides (this could affect picture quality). Non-slip rubber feet are provided to prevent movement of the unit while operating in playback mode.
2. Press the REWIND (◀) button to return the tape to the beginning. (CAUTION! Do not hold the REWIND button down for long periods

of time when the tape is stopped at the end of the reel. If you do, you will hear the beeper. Holding down the REWIND button too long reduces battery life.

3. Turn on your TV and set the channel selector switch (See pg. 13, FIG. 7) to the vacant channel (3 or 4) not used for broadcasting in your area.

NOTE: Both the camcorder channel 3-4 switch and your TV must be set to the same channel.

4. You are now ready to view your recorded material. Simply press the PLAY (▶) button and watch the fun! If you want to re-record or add to what you have already recorded, simply REWIND (◀) the tape to the desired location and start again.

Notes About Cassette Tapes:

- We recommend the PXL2000 Camcorder high bias tape for best results. Do not use poor quality tape or C120 tape in your PXL2000 Camcorder as video reproduction will not be satisfactory; also, lower quality cassettes may easily jam in the camcorder.
- To prevent tape jamming, be sure the tape is not loose inside the cassette. Simply place a pencil or similar object in one of the holes in the cassette and turn the tape spool until all loose tape is taken up (See pg.15, FIG. 8).
- Do not use metal tapes. Metal tapes will not function in the PXL2000 Camcorder.



FIG. 8

- Cassettes used with the PXL2000 Camcorder can be used on audio equipment with no resulting damage to equipment or cassette. You can record over any and all previously stored material.

- You can protect your recordings from accidental erasure by removing the interlock tabs from the cassette after you have completed your recording. These tabs are located opposite the exposed tape area. To prevent side 1 from being erased, hold the cassette with the tape opening away from you with side 1 on top. Break off the tab on the right (see FIG. 9A). In the future, if you wish to erase or record over a previously used tape, you will need to place transparent tape over the interlock holes (See FIG. 9B).



FIG. 9A



FIG. 9B

Using The PXL2000 Camcorder With Your VCR:

You can transfer your PXL2000 Camcorder recordings onto a VCR tape in two ways:

- Direct recording to a VCR tape.
- Transfer from a PXL2000 recorded tape to another format tape.

VCR Hook-Up

By using the F-adaptor shown on pg. 12, FIG. 6 (available at local electronics retailers), you can connect your PXL2000 Camcorder to a VCR and save your PXL2000 recordings on VCR tapes.

Connections:

- Connect adaptor to "F" terminal marked "VHF IN" or "IN FROM ANTENNA". (See instructions packed with your VCR.)
- Connect the video cable to the adaptor on one end and to the PXL2000 Camcorder "TV" jack on the other.
- To view your video on the VCR, be sure the original cable supplied with your VCR is still connected between the "VHF OUT" or "OUT TO TV" terminal on your VCR and the "VHF IN" terminal on your TV.

Direct Recording To A VCR Tape (such as VHS or Beta).

- Turn power on to all systems: TV, VCR, and PXL2000.

- Be sure all channel selections are compatible on PXL, VCR tuner, and VCR channel select switch (either 3 or 4; whichever channel is not used for broadcasting in your viewing area). (See VCR instructions for 3-4 switch location.)
- TV should be tuned to a compatible channel or if using a monitor, should be set to VIDEO mode.
- VCR set to "VCR" mode.
- Be sure BOTH your VCR and PXL2000 Camcorder each has a tape inserted. (Both cassettes must have the plastic record interlock tabs intact or if removed, holes should be taped over.)
- Check the REMOTE RECORD TRIGGER (●) to be sure it is in the OFF (sticking out) position. The motor in the camcorder does not need to run unless you wish to record both PXL2000 Camcorder format tapes and your VCR format simultaneously. (See TRANSFER section next.)
- Now press the RECORD (●) button on the PXL2000 camcorder. You should have LIVE VIDEO on the TV screen.
- With LIVE VIDEO on the TV, put your VCR into record mode as you normally would. You are now recording video and audio directly onto your VCR. The PXL2000 Camcorder acts as

your "camera" - and you are only limited by the length of connecting cables.

Transfer of Recorded Material From The PXL2000 Tape To A VCR Tape:

- Connect the PXL2000 to a VCR as described above.
- Then, once you have placed your VCR in RECORD mode, press the PLAY (▶) button on the PXL2000 Camcorder to start the tape. You will now see your previously recorded video from PXL on the TV screen. This video is now being recorded directly onto your VCR tape. This transfer process will not affect the recorded material on your PXL2000 Camcorder tape. It will remain as recorded video and audio until it is erased by the PXL2000 Camcorder.

Note: As with any recording tape, be careful not to place your PXL2000 Camcorder cassette tapes or any magnetic tape on or near speakers, televisions, or any household appliance containing magnets or producing magnetic fields. Accidental erasure could result.

Should you have trouble recording or getting a video image on your TV, turn to **Troubleshooting**, pg. 18. If you just wish to improve your recording techniques, turn to **Tips for Better Videos**, pg. 20.

Note: Do not leave the Camcorder unattended in the LIVE mode. Always press the STOP/EJECT (●) button when finished recording.

NOTE: Use of any AC adaptor with output other than that specified could damage your PXL2000 Camcorder. Use of an AC adaptor with incorrect output voids all product warranties. Your PXL2000 Camcorder must not be used in bathing areas, outdoors or other damp areas when used with an AC adaptor. **DO NOT USE EXTENSION CORDS WITH THE ADAPTOR.**

Tips For Better Video

Holding Camcorder:

The handle area of the PXL2000 Camcorder is designed for a comfortable grip by either the right or left hand. Figure 10 shows the correct holding position for comfort and better video.

- Keep your hands and fingers away from the microphone to prevent recording any unwanted noise.
- Hold the camcorder steady by supporting your arms against your sides or a stationary object such as a tree or wall. Also brace the soft rubber eyecup against your face.
- If you want to move your field of view, move the camcorder slowly and steadily. If you are following a moving subject, try to move a little ahead to compensate for stop and go action.
- Use the mini tripod when you want to be in the video or when you simply need the steady support of a table or other flat surface.



FIG. 10

Use of Viewfinder:

The optical viewfinder on the PXL2000 Camcorder is designed to give the most accurate framing aid possible. Different positions of the eye on the eyecup can give incorrect feedback as to what is in the picture. Also if you wear glasses, your perception will be different from those who don't. Follow these guidelines for the most accurate framing of your videos:

- Keep your eye centered in the eyecup.
- Place the eyecup firmly against your face to exclude light and help in positioning.
- Always allow extra room in the picture surrounding your subject to insure you are getting the picture you want.

Lighting Conditions:

Your PXL2000 Camcorder is designed to operate under a wide variety of lighting conditions, from low light indoor settings to bright, sunlit surroundings. There are, however, certain limitations which are common to all video cameras. Use the following suggestions for best results:

- Evenly lit subjects make the best videos. Avoid heavily backlit subjects and large bright or dark areas in the center of the picture.
- When indoors or in darkly lit scenes, the LO-HI filter ring (See FIG. 1) should be set to LO.
- When filming outdoors or in brightly lit situations, the LO-HI filter ring should be set to HI.
- The red light (LED) warning indicator in the viewfinder acts as a guide for proper lighting. When lit, it means that the lighting situation you are using may not produce good video. This "warning" is approximate and in some situations, even though the LED is lit, you may still get suitable video. It is therefore recommended that you visually analyze the lighting when the LED lights in the viewfinder and determine if the situation requires changing. A little experience will make this process automatic.

One Year Limited Warranty

The PXL2000 Camcorder is warranted by Fisher-Price against defects in material or workmanship for a period of one year from date of purchase. If the unit fails to work properly, when used under normal play conditions, we will repair or replace it free of charge. Please use the prepaid mailing label included in the PXL2000 Camcorder package. We will pay the cost of returning the repaired or replaced PXL2000 Camcorder to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CAUTION: The electronic components are not designed for consumer repair. Evidence of any attempted consumer tampering will void warranty.

Consumer Service:

If the PXL2000 Camcorder is not functioning properly, replace all the batteries with a *fresh* set of alkaline batteries and refer to **Trouble-shooting**, pg. 14. If this does not resolve the problem, please telephone our toll-free PXL2000 Consumer Service Center number.

We may be able to solve your problem over the telephone. If we can't, we'll tell you what to do so your camcorder can be repaired and returned as fast as possible. Our toll-free Consumer Service number:

1-800-262-PXL2

Call between 8:30 a.m. and 11:00 p.m., Eastern Time, Monday through Friday and 8:30 a.m. - 8:00 p.m., Saturday and Sunday.

Mailing address: PXL2000 Consumer Service Center
2350 Pleasant Avenue
Hamilton, Ohio 45015

Mail only via Parcel Post insured (U.S. Post Office).

Call Our Toll-Free Hotline

If your PXL2000 Camcorder isn't performing up to par or if you just have some questions or suggestions, call us at our toll-free number for immediate attention. Often problems can be solved over the telephone in just a few minutes. Our number is:

1-800-262-PXL2

PREPAID MAILING LABEL

If your PXL2000 isn't working properly, the problem may be easily solved. Check these things first:

- Are you using a PXL2000 tape or a high quality high bias tape?
- Does the tape need to be turned over or rewound?
- Is the tape door closed all the way?
- If recording, are both the RECORD button and REMOTE RECORD TRIGGER properly activated?
- Are the batteries inserted correctly?
- Have you tried using fresh DURACELL alkaline batteries?
- Is your TV switched to channel 3 or 4 and the video switch-box lever in the CAMCORDER position?
- Is the Camcorder too close to your TV or any electrical appliance?

PXL2000 Consumer Service Center

If we can't solve the problem over the phone, we'll tell you what to do so your PXL2000 can be repaired and returned as fast as possible. To speed your repair, make sure you *call first* so that we can assign to you your unique TRACKING I.D. NUMBER to identify your package when we receive it at our Service Center.

If our service representatives advise you to send your PXL2000 to the Service Center for repair, pack it in a sturdy box, tape this Prepaid Mailing Label on the outside of the box, fill in your return address and I.D. Number, and drop your PXL2000 into your neighborhood mailbox. No postage stamps are needed!

Cut Out and Tape to Package

FROM: _____ _____ _____	NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES
I.D.# _____ DELIVERY POST OFFICE COMPUTE POSTAGE DUE	
ACCEPTANCE POST OFFICE FOR ANCILLARY SERVICES ONLY	
POSTAGE _____	
MERCHANDISE RETURN FEE _____	
TOTAL POSTAGE DUE \$ _____	
MERCHANDISE RETURN LABEL	
PERMIT #2 HAMILTON, OHIO 45015	
PXL SERVICE CENTER 2350 PLEASANT AVE.	
POSTAGE DUE UNIT	
U.S. POSTAL SERVICE	
HAMILTON, OHIO 45015	

HELPFUL HINTS

If you have any questions or problems concerning the PXL2000 Camcorder, please call toll-free the Consumer Service Center:

1-800-262-PXL2

- Always press the STOP button when you are finished recording to prevent camcorder damage.
- For best recording results, use PXL2000 recording tape only.
- Use only fresh DURACELL® alkaline batteries. Old batteries or inferior substitutes will affect performance.
- For optimal battery life, use an AC adaptor for playback and indoor recording.
- For best playback performance, rest your PXL2000 Camcorder on its side as far away as possible from your TV. Electrical appliances may cause record and playback interference.
- A small TV screen (13 inches or less) provides the best playback picture quality. The larger the TV, the lower the picture resolution appears.
- For playback, your TV set must be set to the same channel as your Camcorder - channel 3 or 4.
- As with all camcorders, live picture playback produces a better picture than tape recorded playback.
- When you hear the beeper, press STOP or release the REWIND button.

DID YOU KNOW...

- ... Your PXL2000 Camcorder is a video camera, recorder and playback unit all in one.
- ... Your PXL2000 Camcorder is the lightest, least expensive and easiest to use camcorder currently on the market.
- ... Your PXL2000 Camcorder plays back a unique black and white dot matrix picture (Pixelvision) that is surrounded by a small black border.
- ... You can use your PXL2000 Camcorder in conjunction with a conventional VCR unit for recording longer tapes or creating a video library tape.
- ... A Carrying Case for protected storage and an Action Strap for on-the-go storage are also available.
- ... There is a special toll-free number to call if you have any questions or problems concerning your PXL2000 Camcorder.

1-800-262-PXL2

©1987 Fisher-Price

Division of The Quaker Oats Company
East Aurora, New York 14052